






## Attaching Fixxon buttons...

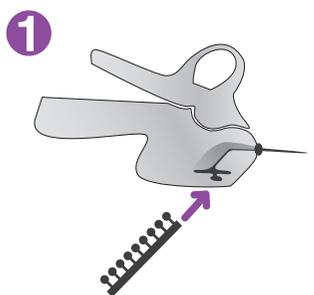


1 Insert fasteners into the Fixxon gun, using the bottom slot. Push until they 'click' into place.

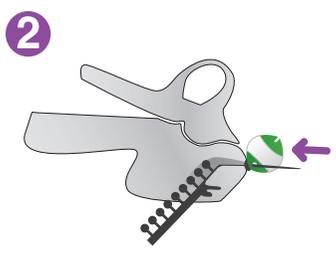


2 Put needle through round hole of button (printed side facing the gun).

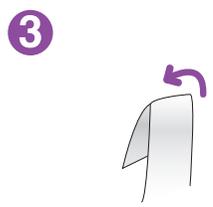


3 Choose where to position the button (see recommendations below). Fold the material in two.

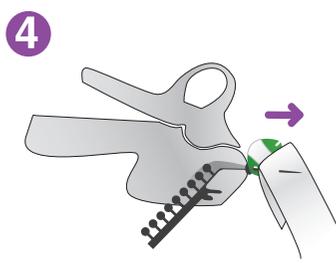


4 Put the needle of the gun through the material, close to the fold (a few mm away).

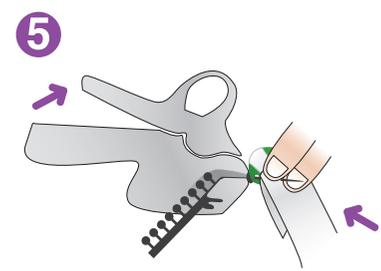


5 Whilst firmly holding the button and material against the gun, press the trigger to shoot the fastener through both button and material.

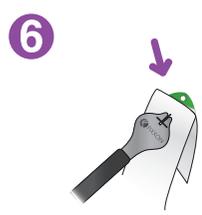

6 Using the Fixxon attacher tool, hook underneath the 'T' of the fastener.

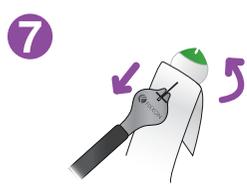


7 Rotate the button, then stretch the fastener and drop it into the allocated slot.

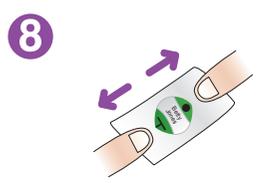

8 Pull the material taut. The Fixxon button is now firmly attached.

## Removing Fixxon buttons...

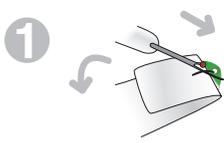

1 Reveal underside of Button. Place tip of remover tool underneath the fastener. Push forward to cut.



2 The remains of the fastener can be disposed of. The Fixxon button is now ready for re-use.

## Recommended button positioning...

### Outer garments

Tops, shirts, etc. Position button on bottom left side, on wash label or seam.


Trousers, skirts, etc. Position button on inside of hem, left leg or left side.



### Under garments

Position button on the outside of garment, away from any pressure points.

Alternatively these can be laundered in a net bag with a button on the label of the bag.

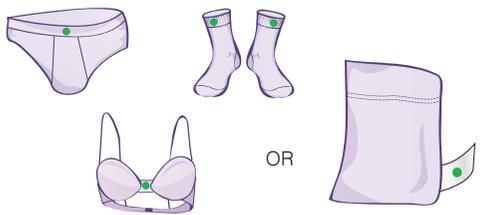

HPRAs Wholesalers authorisation No. W00426/00001

Tel: +353 (0) 1835 2411

Email: sales@medguard.ie

Unit 28B Ashbourne Business Centre, Ashbourne, Co Meath, A84 WA49