

# UNION Door Closers

DoorSense  
UNION

**MEDGUARD**®

Professional Healthcare Supplies



## Application:

Preventing a fire door from closing can put your insurance at risk – and land you in court if a fire takes hold. But you still need a way to hold a fire door open for ease of access.

DoorSense is the new way for you to keep a fire door open – and have it close if the alarm sounds, or at a set time.

DoorSense is a standalone unit which can be fixed to a fire door in seconds to provide a reliable way to keep it open – but will automatically release if the fire alarm sounds. DoorSense is incredibly easy to install, needing no wiring or special skills – it can even use the same footprint as some older units. Once fitted, DoorSense is powered by two Alkaline C batteries for long working life, and has a Low Battery indicator to help you keep the unit in excellent working order.

Once in place you can have it working manually or automatically via a timer to set a night release time, and then leave DoorSense to get on with the job of giving easy access while keep your staff safe.

DoorSense is designed to be robust and practical. A curved, fire-retardant casing helps to deflect impacts and stay looking smart even when subjected to extreme treatment, while the unit footprint allows it to be a direct retro fit for older fire door hold open devices.

DoorSense is available in three colours: Black, Red and White, and comes supplied with full fitting and setup instructions along with batteries for instant startup.



## Standards:

Compliant with BS EN 1155

3 5 3 1 1 0  
7

EMC Tested and rated for timber doors  
(FD120)

## Specification:

Suitable for use with fire rated doors using door closers with power rating between 3-7

Width: 194mm

Height: 207mm

Depth: 43mm

Power Requirements: 2 x 1.5V DC LR14 Size C Batteries

## Finish:

DoorSense is available in the following colours:

Black (J-8755A-BLACK)

Red (J-8755A-RED)


White (J-8755A-WHITE)

# UNION Door Closers

DoorSense  
UNION



## Technical Design:

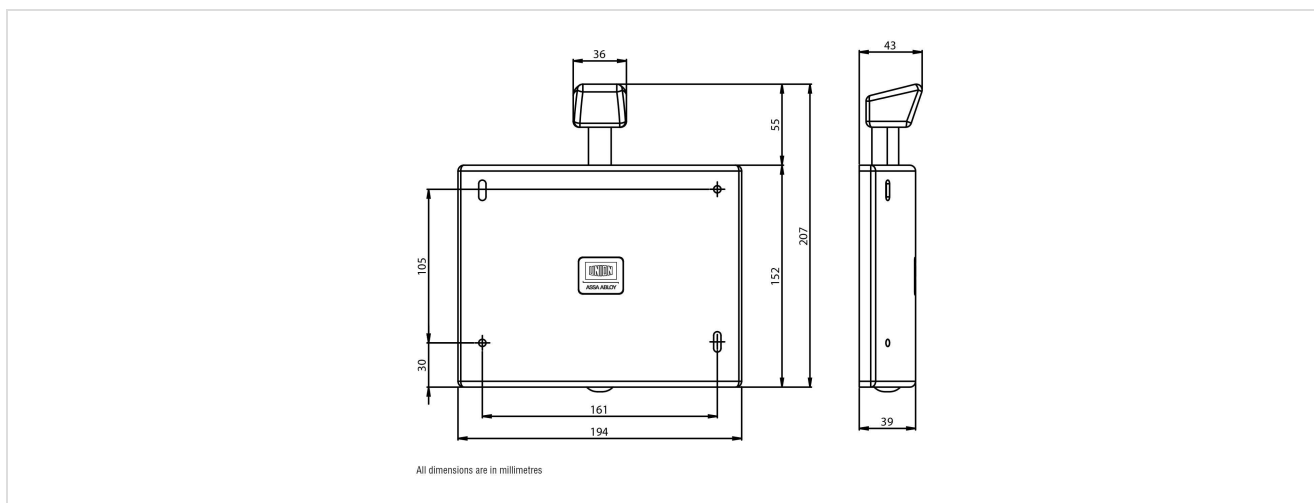

## Variants:

Code	Description
J-8755A-BLACK	UNION DoorSense Black
J-8755A-RED	UNION DoorSense Red
J-8755A-WHITE	UNION DoorSense White

HPRA Wholesalers authorisation No. W00426/00001

Tel: +353 (0) 1 835 2411

Email: [sales@medguard.ie](mailto:sales@medguard.ie)

Unit 28B Ashbourne Business Centre, Ashbourne, Co Meath, A84 WA49